

|IWCTT Series

INDUSTRIAL WIRELESS CURRENT TRANSFORMER TRANSMITTER



Whilst every effort has been taken to ensure the accuracy of this document, we accept no responsibility for damage, injury, loss, or expense resulting from errors or omissions, and reserve the right of amendment without notice.

Information for users

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

This document may not be reproduced in any way without the prior written permission of the company.

Cynergy3 Components Ltd
7 Cobham Road, Ferndown Industrial Estate, Wimborne
Dorset BH21 7PE, United Kingdom
Tel: +44(0)1202 897969, email: sales@cynergy3.com
www.cynergy3.com

CONTENTS

1. INTRODUCTION	3
1.1 Safety Information	3
1.2 Hardware Features	3
2. UNPACKING	4
3. PRODUCT IDENTIFICATION LABEL	4
4. INSTALLING/CHANGING THE BATTERY	4
5. SETTING UP THE IWT WIRELESS TRANSMITTER	5
6. TROUBLE-SHOOTING GUIDE	7
7. SYSTEM PART NUMBERS	8
8. SPECIFICATIONS	8

1. INTRODUCTION

1.1 Safety Information

This manual contains information that must be observed in the interest of your safety and to avoid damage to assets. Please read this manual before installing and commissioning the device and keep the manual in an accessible location for all users.

Contains FCC ID: W70MRF24J40MDME

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

Please see the Certifications section for more information on RF Exposure Compliance

1.2 Hardware Features

Our range of IWT wireless transmitters are available for a wide range of input types. The IWCTT Current Transformer Transmitter has been designed to accept an input from any mV AC output current transformer up to 500mVac and transmit the value to one of the IWR range of receivers.

Please note that the IWCTT can also accept mV DC inputs up to a maximum of 0-500mVdc

Depending on the receiver used, the value can be outputted as either a 4-20 mA or 1-5 V dc signal, displayed and logged on a PC, output as a Modbus RTU or TCP/IP register, or transmitted to a remote server using MQTT messages. The range of receivers available is shown in the table below.

Receiver Type	Features
IWR-1	1 off 4-20 mA or 1-5 V and 1 off Relay Output
IWR-5	5 off 4-20 mA or 1-5 V and 1 off Relay Output
IWR-USB	Connects to any PC for data display and logging
IWR-PORT	Stores data from IWT transmitters as Modbus Registers
IoT-Gateway	Stores data from IWT Transmitters & sends it to remote servers using MQTT packets

The IWCTT Current Transformer transmitter works within the ISM license-free 2.4GHz bands.

Ranges of up to 500 m are possible using the standard transmitter and receiver unit with the optional 3dBi antenna giving a range of up to 750 m.

The transmitter is powered by a primary 3.6 V lithium cell and care must be taken to insert the battery in the correct polarity.

2. UNPACKING

The instrument should be carefully inspected for signs of damage that may have occurred in transit. In the unlikely case that damage has been sustained, DO NOT use the instrument, but please retain all packaging for our inspection and contact your supplier immediately.

3. PRODUCT IDENTIFICATION LABEL

The unit delivered should be carefully inspected to ensure it is suitable for the application required. Detailed information on the product is included in the identification label and the user manual.

Please ensure, in particular, that the input range of the IWT is suitable for the intended application and that the IWT unit will not be subjected to temperatures greater than those specified in this manual.

4. INSTALLING/CHANGING THE BATTERY

A Lithium 3.6V battery is included inside the IWT transmitter. The battery may be changed at any time, but care must be taken to install the battery with the correct polarity. After the battery has been changed, the unit should be switched on using the yellow slider switch SW3 and then the pushbutton SW1 should be pushed and held for 5s. This is to ensure the battery life count is reset correctly when a new battery is installed.

The internal red LED will flash 5 times to indicate this procedure has been carried out successfully.

The battery life is determined by the rate the transmitter sends the Temperature value to the receiver, this update rate can be selected using Dip Switch 1 and the default value is 10s.

Please dispose of all batteries as specified by the legislator according to the Closed Substance Cycle and Waste Management Act or country regulations.



! WARNING !
MAKE SURE THE CORRECT
BATTERY POLARITY IS OBSERVED!




! WARNING !
INCORRECT BATTERIES MAY DAMAGE THE UNIT
USE ONLY 3.6V LITHIUM C CELL BATTERIES

5. SETTING UP THE IWT WIRELESS TRANSMITTER

The IWT instrument is shipped in a default configuration which allows the unit to connect with any default IWR receiver unit and transmit the measured signal every 10s simply by switching the unit on using SW3 on the internal circuit board.

If a different update rate is required, or a different network frequency channel is required these parameters can be selected using DIP Switch 1 as detailed below:

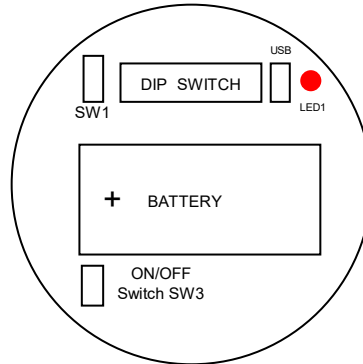

Switches 1, 2, 3 & 4 select the RF Network the IWT will transmit on. The default network for both the IWT transmitter and IWR receiver is network 1.

RF NETWORK	1	2	3	4
1	0	0	0	0
2	0	0	0	1
3	0	0	1	0
4	0	0	1	1
5	0	1	0	0
6	0	1	0	1
7	0	1	1	0
8	0	1	1	1
9	1	0	0	0
10	1	0	0	1
11	1	0	1	0
12	1	0	1	1
13	1	1	0	0
14	1	1	0	1
15	1	1	1	0
16	1	1	1	1

| IWCTT SERIES

WIRELESS CURRENT TRANSFORMER TRANSMITTER OPERATING MANUAL

Switches 5, 6 & 7 select the Transmission rate of the unit. This effectively sets how often the measured value is sent to the receiver.

At 1 and 5 second rate, a power save option is available (on by default) that changes the transmit time to every 30 seconds if the IWR is switched off or out of range for more than 3 minutes. This option can be changed using the IWT-SET program.

Transmit time	5	6	7
10 seconds	0	0	0
20 seconds	0	0	1
30 seconds	0	1	0
60 seconds	0	1	1
120 seconds	1	0	0
600 seconds	1	0	1
1 second	1	1	0
5 seconds	1	1	1

Switches 8, 9, and 10 set the Channel Number of the transmitter. This is used with the 5 channel receiver unit (IWR-5) to select which IWT wireless transmitter is linked to which 4-20 mA or 1-5 V dc output channel.

Channels 1 to 128 can be used with an IWR-USB, IWR-PORT, or IoT Gateway receiver. The channel number can be changed using the IWT-SET PC configuration software if switches 8, 9, and 10 are switched to the on position.

Tx Channel Number	8	9	10
1	0	0	0
2	0	0	1
3	0	1	0
4	0	1	1
5	1	0	0
6	1	0	1
7	1	1	0
8 (or 1 to 128)	1	1	1

The IWT transmitter is now set up and ready to be used. Install the unit where required, wire the appropriate input into the IWT as specified below (if there isn't an integral sensor), and switch the unit ON using SW3. Pushbutton switch SW1 can be pushed to force the unit to transmit its current measured value. A red LED 1 will flash once when the transmit button is pressed and flash a second time if the transmission has been received and acknowledged by an IWR receiver unit.

If the unit has transmitted successfully, the output of the connected receiver unit will output a value reflecting the signal level being measured.

6. TROUBLE-SHOOTING GUIDE

Problem encountered	Possible Causes
LED1 doesn't flash when pushbutton SW1 is pressed	Unit not switched on, switch on using SW3. The battery is not installed correctly. The battery needs replacing.
LED1 only flashes once when SW1 is pressed	IWR receiver not switched on. IWR receiver is not set up for the same RF network. IWR receiver not within range of the transmitter. If an IWR-1 receiver is used, ensure that the transmitter is set to Tx Channel 1
Output from the IWR receiver isn't equivalent to the signal being monitored	IWR receiver set up incorrectly, see IWR user manual for further details. Check that the green external LED on the receiver is flashing when the transmitter push button is pressed as the receiver may be out of range.

7. SYSTEM PART NUMBERS

Part Number	Range	Connection
IWCTT50	0 - 50 mV ac	1. +ve 2. -ve
IWCTT200	0 - 200 mV ac	1. +ve 2. -ve
IWCTT330	0 - 330 mV ac	1. +ve 2. -ve
IWCTT500	0 - 500 mV ac	1. +ve 2. -ve

Receiver Part Number	Number of Output Channels
IWR-1	One
IWR-5	Five
IWR-USB	Data from up to 128 IWT Transmitters
IWR-PORT	Data from up to 128 IWT Transmitters
IoT-Gateway	Data from up to 128 IWT Transmitters
IANT-3	3 dBi Antenna

8. SPECIFICATIONS

System Performance	
Accuracy (non-linearity & hysteresis)	<± 1.0 % FSD
Setting Errors	Zero & Full Scale, <± 1.0% FSD
Input range	Ac/dc mV From CT up to 0-500mV
Ambient Temperature	-20 to +80 °C
Storage Temperature	-20 to +80 °C
Weight	310 g
RF Transmitter	Contains FCC W70MRF24J40MDME
Power Requirements	Lithium Thionyl Chloride C 3.6 V Cell
Battery Life	5 Years (10s transmission rate)
Dimensions	79 mm x 79 mm x 52mm (L x W x D)
Mounting	Any Orientation

United States FCC

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications not expressly approved by Cynergy3 could void the user's authority to operate the equipment.

RF Exposure

Contains FCC ID: W70MRF24J40MDME

In this equipment, the antenna supplied is a PCB antenna and an alternative antenna must not be used.

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

Canada (IC)

English

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of the type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

French

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il fait

| IWCTT SERIES

WIRELESS CURRENT TRANSFORMER TRANSMITTER OPERATING MANUAL

choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Europe

The MRF24J40MD/ME wireless module used in this equipment has been tested and is in conformity with the essential requirements and other relevant requirements of the RED Directive 2014/53/EU. That module is in conformity with the following standards and/or other normative documents:

Certification	Standards	Article
Safety	EN60950-1-2006 / A11:2009 / A1:2010 / A12:2011 / A2:2013	(3.1(a))
Health	EN 300 328 V2.1.1 / EN 62479:2010	(3.1(a))
EMC	EN 301 489-1 V2.1.1 EN 301 489-1 V2.2.0 EN 301 489-17 V3.1.1 EN 301 489-17 V3.2.0	(3.1(b))
Radio	EN 300 328 V2.1.1	(3.2)

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

CONTACT US

EUROPE

+44 (0)1202 897969

c3w_sales@sensata.com

Cynergy3 Components Ltd.

7 Cobham Road,

Ferndown Industrial Estate,

Wimborne, Dorset,

BH21 7PE, United Kingdom

USA

+1 310 561 8092 / +1 866 258 5057

c3w_sales@sensata.com