


<u>CASE MATERIAL</u> DUPONT ZYTEL FR50 3D MODEL AVAILABLE UPON REQUEST

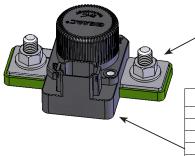

## POWER CONNECTION ZINC PLATED, M12X1.75 BOLT STAINLESS M12X1.75 FLANGED NUT

TORQUE 200-300 IN-LB (22-33 Nm)

MATING DEUTSCH CONNECTOR *			
PART NUMBER	DESCRIPTION		
DT06-08SA	CONNECTOR HOUSING		
0462-201-16141	SOCKET		
114017	SEALING PLUG		
HDT-48-00	RECOMMENDED CRIMPER		
W8S	WEDGE		

\* AVAILABLE AS AN ASSEMBLY (0857-3/4)

Coil Ratings (25°C, Currents & Power At Nominal V)					
Series	15		16		
Coil P/N Designation	В	С	В	С	
Coil Voltage (Nominal)	12	24	12	24	٧
Maximum Safe Voltage	16	32	16	32	٧
Inrush Current (max, includes both coils)	3.9	1.6	3.8	1.9	Α
Hold Current after inrush (max)	0.23	0.097	0.64	0.32	Α
Coil Hold Power (max)	2.8	2.3	7.7	7.8	W
Coil Back EMF <sup>1</sup>	0			٧	
Transient on all pins	+50V 13ms				
Reverse polarity on all pins	-80			٧	

<sup>1</sup> Coils are switched internally with a FET, so no fly-back/suppression voltage is seen at the coil inputs.


## **Over Current Contactor**

Automatic trip function 350 amp and 600 amp versions

MXSA Smart-Tactor™



Key Features				
EPIC® Seal	Ceramic to metal braze. Gas filled hermetic chamber protects key components. Exceeds IP69K standard			
Contacts / Form	Silver / SPST / NO			
Coil	Efficient two coil design with no PWM or EMI emissions.			
Suppression	Coil suppression built in			
High Shock and Vibration	For rugged environments, off-road and tracked vehicles			
Installation	Not direction sensitive			
Reference	MIL-R-6106, RoHS			

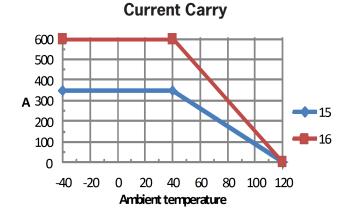



GIGAVAC®			6382 Rose Lane Carpinteria, CA 93013		
www.gig	gavac.com	info@gigavac.com	+805-684-8401		
Rev 10	11-28-17	© 2017 GIGAVAC, LLC	Page 1 of 2 MXSA		

Environmental And Switc	hing Sp	ecifica	ition			
Series	15 16					
Contacts						
Contact form	SPST-NO					
Contact Voltage Rating	12-48V					
Insulation resistance, A1-A2 and A1&A2 to controls	500V, 100M $\Omega$ (50M $\Omega$ after life)				e)	
Dielectric, A1-A2 and A1&A2 to controls	2200VAC, 60Hz, 1mA					
Contact Resistance (max)	1.5 mΩ (.4 avg)					
Current (see chart for Temp. derating)	350A 600A 400MCM 500MCN					
90s	100	)OA	1	.500A		
10s	200	)OA	3	3000A		
1s	300	)0A	4	1000A		
Optional Aux, SPST, NO or NC	2A @ 28V					
Resistive Load Switching						
Fault interrupt	300	)0A	5	5000A		
Resistive switching @ 28V	100,000 cycles 100,000 cyc @ 350A @ 600A				es	
Please contact factory for more detailed resitive switching specifications.						
Mechanical life 300,000 cycles						
Environmental Specifications						
Weight (Max, with hardware)	1.6lbs, 725g 2lbs, 910g					
Vibration (10 - 2000Hz)	15G					
Shock, 1/2 Sine, 11ms	20G					
Temperature Range (ambient)	-40°C to 85°C					
Max Terminal Temperature	125°C					
Water Resistance	IP67 and IP69K					
Seal: Hermetic Vacuum Braze, tested to E		<del></del>				
Steam/Water-Jet/ Boiling Water	105psi Steam/2750psi Jet/ Submersion in BW					
Chemicals, Corrosion, Fungal Growth	Resistant					
Timing (Max Value	es @ 2!	5°C)				
Operate (including bounce)	20				ms	
Inrush	75				ms	
Release	12 7			7	ms	
For details, contact factory for App. Note	8	9	12	13	#	

## NOTES:

- 1. With power applied to Vin, the contacts will close when Vcontrol is greater than Vcontrol:Close and open when Vcontrol is less than Vcontrol:Open (see Settings Parameters for values). Connect Vcontrol to Vin to disable logic level control.
- 2. When the trip limit is exceeded the contacts will open and the Trip indicator line will go low. The TRIP pin is an open drain. After a trip, Vcontrol needs to be brought low to reset the contactor.
- 3. Connect resistor Rx as shown in red to set the current trip level. Choose Rx using the equation in Settings Parameters. No resistor = 600A.
- 4. Contactor has two coils. Both are used for pull-in. After approx mately 75 milliseconds, one coil is electronically removed from the coil drive circuit. The remaining coil supplies low continuous hold power sufficient for the contactor to meet all of its specified performance specifications. This provides the lowest coil power possible without the use of PWM electronics that have been known to cause EMI emissions and/or crosstalk on system control power.
- 5. Current Sense: Indicates the current through the main contacts (A2 and A1). The current sense range is from -600 to +600 amps.

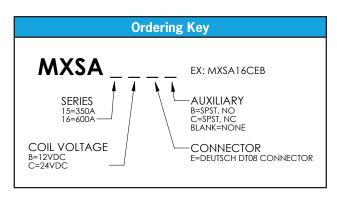

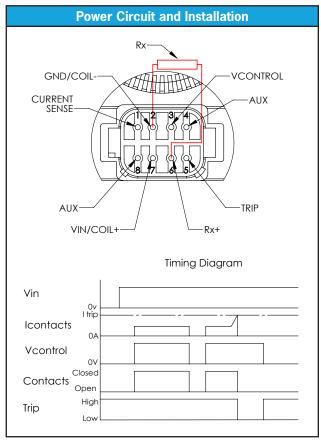

Settings Parameters					
Coil Voltage	В	С			
Vin Input Voltage Range	10-16 20-30		V		
Vcontrol Pin Input Resistance	10k with 100	Ω			
Vcontrol:Close	2.5-3	V			
Vcontrol:Open	0-1.	V			
<b>Current Trip Setting Range</b>	±(20-6	Α			
Rx Value (I_Trip is the trip level in Amps)	Rx = 100kΩ 600	А			
<b>Current Sense Accuracy</b>	±79				
<b>Over Current Response Time</b>	2ms + rele	ms			
Max Sink Current on Trip Pin	10	mA			



Datasheets provided by Sensata Technologies, Inc., its subsidiaries and/or affiliates ("Sensata") are solely intended to assist third parties ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, valuation, and judgment in designing Buyer's systems and products. Sensata datasheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata may make corrections, enhancements, improvements, and other changes to its datasheets or components without notice.

Buyers are authorized to use Sensata datasheets with the Sensata component(s) identified in each particular datasheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATASHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATASHEETS OR USE OF THE DATASHEETS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATASHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY, AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA

## **CONTACT US**

**Regional head offices:** 

**United States of America** 

Sensata Technologies Attleboro, MA

**Phone:** 508-236-3800

**E-mail:** support@sensata.com

**Netherlands** 

Sensata Technologies Holland B.V.

Hengelo

Phone: +31 74 357 8000 E-mail: support@sensata.com

China

Sensata Technologies China Co., Ltd.

Shanghai

**Phone:** +8621 2306 1500 **E-mail:** support@sensata.com

Copyright © 2023 Sensata Technologies, Inc.